

JUNKETTRIBE

Born To Explore
U N I S E X







To manually wind an automatic movement:

The motion of your arm during normal daily activities should be sufficient to keep the movement of your automatic timepiece wand. However, if you have not worn your watch for a few days, and the watch has stopped, you will need to wind it by hand before setting the time:

- 1. With the crown in position 1, turn the crown clockwise approximately 20 revolutions.
- 2. Reset time following instructions above.

info@junkettribe.com www.junkettribe.com

